




Torin
**BLACK
JACK[®]**

*Min. Height: 9-13/16 inch
Max. Height: 14-15/16 inch*

*Min. Height: 24.9 cm
Max. Height: 37.9 cm*

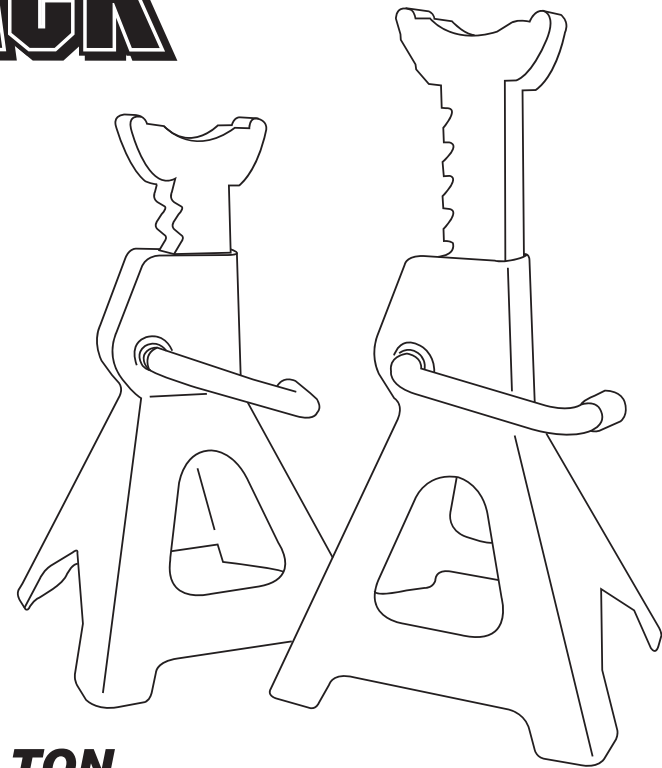

2 **TON**
TONELADAS

Ratcheting Jack Stands

Operating and Maintenance Instruction Manual

Base Para Gato De Trinquete

Manual De Instrucciones Para El Funcionamiento
Y Mantenimiento



Torin
BLACK JACK[®]
PRO SERIES[™]

TORIN JACKS, INC.
Ontario, CA 91761

FOR CUSTOMER SERVICE
PARA EL SERVICIO PARA EL
CONSUMIDOR

1-888-44-TORIN

MADE IN CHINA HECHO EN CHINA



2 Ton Jack Stand Owner's Manual

PLEASE READ THIS MANUAL CAREFULLY BEFORE USE.

IMPORTANT:

Study, Understand and follow all instructions failure to heed this warning may result in personal injury and/or property damage.

WARNING:

Read-Study, understand all warning and operating instructions prior to use. DO NOT OVERLOAD BEYOND RATED CAPACITY Always use jack stands on level, solid ground, Never use on slope, inclined, angle or soft surface. Always use stands in pairs, on the same axel, and at the same height. Stands are not to be used to simultaneously support both ends or one side of vehicle. Failure to heed these warnings may result in damage to jack and/or failure resulting in personal injury or property damage. Inspect before each use. Support the vehicle only on areas specified by the vehicle manufacturer. Make sure the load and stand are stable before getting under the vehicle. Center load on saddle. Never use any other additional Support. Some vehicles require an adapter to properly engage the fram for lifting. Use vehicle manufacturers instructions on proper lifting. No alterations shall be made to this product. Only attachments and/or adapters supplied by the manufacturer shall be used.





OPERATING INSTRUCTION:

1. Put the jack stands on hard level ground
2. Adjust height by pulling up on ratchet.
3. Place load on the center of saddle for safety it is strongly recommended that lifting means not be removed while jack stands are supporting the vehicle.
4. Secure ratchet by turning stopper to hold load. Make sure stopper has been securely inserted.
5. Release stopper and let ratchet glide down to the lowest position when storing the jack stand.
6. If the operator is not fluent in English, the product and safety instructions shall be read to and discussed with the operator in the operator's native language by the purchaser/owner or his designee, making sure that the operator comprehends their contents.
7. Inspect before each use DO NOT USE IF BENT BROKEN OR CRACKED COMPONENT ARE NOTED. prevent corrosion. Clean as needed and wipe with an oily cloth and keep in dry area when not in use.

Visual inspection shall be performed before each use of the stand by checking abnormal condition, such as cracked welds, leaks and damaged, loose, or missing parts if stand is belived to have been subjected to abnormal load or shock inspection shall be made by authorized repair facility.

Equipment that appears damage or worn or operates abnormally shall be removed from service until repair.

Repair should be made by authorized repair facility. Annual inspection of the stand is recommended and should be made by the manufacturer's or supplier's authorized repair facility to ensure that you stand is optimum conditions and that the stand has correct decals and safety labels specified by the manufacturer.

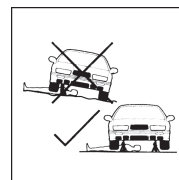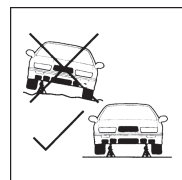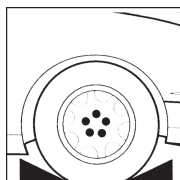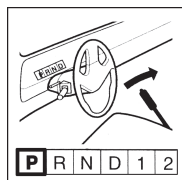

Suporte Gato De 2 Ton Manual Del Propietario

LEA ATENTAMENTE ESTE MANUAL ANTES DE LA UTILIZACION.

IMPORTANTE:

Estudie, Comprenda y signa todas las instrucciones. Si no sigue esta advertencia, puede sufrir danos personales y/o materiales.

ADVERTENCIA:

Lea, estudie y comprenda todas las advertencias e instrucciones para el funcionamiento antes de utilizar No sobrecargue mas de la capacidad calificada. Use las bases del gato siempre sobre terreno nivelado, solido. No lo use nunca en un bajado, inclinacion ni sobre una superficie blanda. Coloque la carga solamente sobre el centro del asiento. Use las bases simpre de a pares, sobre el mismo eje y a la misma altura. Si no respeta estas advertencias podría resultar en lesiones personales y/o danos a la propiedad. Apoye el vehiculo solamente sobre las areas especificadas por el fabricante del vehiculo. Asegurese de que la carga y las bases se encuentre estables antes de introducirse debajo del vehiculo. No utilice nunca ningun otro asiento o soporte adicional para alterar estas bases de algun modo.

INSTRUCCIONES DE FUNCIONAMIENTO:

1. Asegurese de insertar el saliente fijo en el orificio de la parte inferior del gatillo para evitar que este se separe del bastidor.
2. Coloque los soportes del gato sobre una superficie dura y nivelada.
3. Ajuste la altura tirando hacia arriba del gatillo.
4. Coloque la carga en el centro de la silla solamente. Por pazones de seguridad. Se recomienda encarecidamente que no se retire el medio de elevacion mientras los soportes del gato esten aguantando el vehiculo.
5. Fije el gatillo girando el reten para sostener la carga asegurese de que el reten se haya insertado de forma segura.
6. Libere el reten y deje que la guia del gatillo baje hasta la posicion inferior cuando desee guardar el soporte del gato.
7. Inspectar antes de cada uso. No utilice si se nota, fracturado, Roto o doblado.

Una inspeccion visual debe hacerse cada vez antes de utilizar. Observando si hay algun tipo de anomalia, como soldaduras rotas, escapes, partes danadas, sueltas o que falten. Enei caso enque el aparato elevador naya sido utilizado con una carga anormal o golpeado. Se recomienda que esta inspeccion se haga por personal autorizado por el fabricante. Termine el uso de las plataformas defectuosas. Se recomienda una inspeccion anual, a realizarse por personal autorizado por el fabricante. Para asegurar que las plataformas se encuentren en optimus condiciones de usoy que obtenga las etiquetas de seguridad.