



# Operator's Instruction Manual

## 3 TON GARAGE COMBO

Rated Capacity 6,000-lb  
MODEL# T830018+T43002T



This is the Safety Alert Symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death. Read this Manual and follow all the Safety Rules and Operating Instructions before using this product.



**Questions, problems, missing parts?** Before returning to your retailer, call our customer service department at 1-888-448-6746, 8 a.m. - 5 p.m., PST, Monday-Friday.

Distributed by TORIN JACKS INC. Ontario, CA 91761

## OWNER / USER RESPONSIBILITY


### DO NOT OPERATE OR REPAIR THIS EQUIPMENT WITHOUT READING THIS MANUAL.

To maintain the Service Jack and User Safety, the responsibility of the owner is to read and follow these instructions. Follow all installation and operation instructions. Inspect the service jack for proper operation and function. Read and follow the safety instructions. Keep Instructions readily available for equipment operators. Make certain all equipment operators are properly trained, understand how to safely and correctly operate the unit, and are properly trained.

Allow unit operation only with all parts in place and operating safely. Use only genuine replacement parts. Service and maintain the unit only with authorized or approved replacement parts. Negligence will make the jack unsafe for use and void the warranty. Carefully inspect the unit on a regular basis and perform all maintenance as required. Store these instructions in the handle of your jack. Keep all decals on the unit clean and visible.

### Warning Paragraph

Precautions and Safety should always be followed when Installing and Operating this lift. Store these instructions in the handle of your jack. Keep all decals on the unit clean and visible. Please be sure to make sure that ALL USERS read this manual before use and operation. Please read carefully the entire contents of this manual prior to installation and operation. By proceeding you agree that you fully understand and comprehend the full contents of this manual. Failure to operate this equipment as directed may cause injury or death. The manufacturer is not responsible for any damages or injury caused by improper use or neglect.

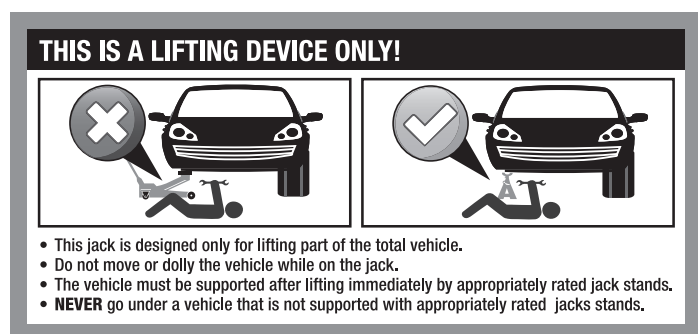

### Always use Jack Stands!

**DO NOT USE** wood blocks or any other non-approved load sustaining devices. The manufacturer only permits loads to be sustained by jack stands that meet current ASME standards.

**DO NOT USE** wood blocks or any other non-approved lifting device in addition for a means of lifting with the jack and or load being raised. Failure to heed these warnings may cause injury or death.

## ! WARNING

### Safety Markings

Safety markings shall conform to the ANSI Z535 series of standards.

- Study, understand, and follow all instructions before operating this device.
- Do not exceed rated capacity.
- Use only on hard level surface.
- Lifting device only. Immediately after lifting, support the vehicle with appropriate means.
- Do not move or dolly the vehicle while on the jack.
- Failure to heed these markings may result in personal injury and/or property damage.

### Safety Messages

Additional safety messages include the following:

- Lift only on areas of the vehicle as specified by the vehicle manufacturer.
- No alterations shall be made to this product.

### Additional Warnings

To avoid crushing and related injuries:

- Never work on, under or around a load supported only by hydraulic jack.
- Always use adequately rated jack stands.
- Chock each unlifted tire in both directions.
- Do not use this device to lift, level, lower, support nor move a house, mobile home, travel trailer, camper or any building structure.
- Be alert and sober when using this product. Do not operate under the influence of drugs or alcohol.





## SAFETY INFORMATION

Study, understand and follow all instructions in this manual before operating the jack. Failure to heed these warnings may result in loss of load, damage to the jack and/or jack failure resulting in personal injury or property damage.

### \* **Position the Jack**

Position the jack to only lift on the areas of the vehicle as specified by the vehicle manufacturer.

### \* **Always Use Support Stands**

After lifting the vehicle always support the load with appropriately rated vehicle supports stands before working on the vehicle.

### \* **Do Not Overload Jack**

Do not overload this jack beyond its rated capacity. Overloading this jack beyond its rated capacity can cause damage to or failure of the jack.

### \* **Always Use on Hard Level Surfaces**

This jack is designed only for use on hard level surfaces capable of sustaining the load. Use on unstable or other insufficient surfaces can result in jack instability and possible loss of load.

### \* **Center Load on Jack Saddle**

Center load on jack saddle before lifting vehicle. Off-center loads and loads lifted when the jack is not level can cause loss of load or damage to the jack.

### \* **Do not raise or lower the vehicle unless tools, materials and people are clear.**

Clean up grease and oil spills immediately. When the lift is being lowered, make sure everyone is standing at least six feet away. Be sure there are no tools or equipment, left under the jack before lowering.

### \* **Always lower the jack slowly.**

### \* **DO NOT USE THE JACK TO SUPPORT OR STABILIZE A LOAD.**

Using the jack to support or stabilize a load may result in unexpected movement and result in serious injury, being crushed and death. Always securely chock and block (stabilize) the load to be lifted. Never place any part of the body under a raised load without properly chocking and supporting the load.

### \* **Never use the jack on curved or tubular vehicle bumpers, this will result in the vehicle slipping off the jack and falling, causing serious injury or death. Use a Bumper Lift to lift most vehicles with curved bumpers or plastic bumpers.**

### \* **Wear ANSI-approved safety glasses and heavy duty work gloves during use.**

### \* **Do not adjust the safety valve.**

### \* **Do not move or dolly vehicle while jack is in use.**

### \* **Stay alert. Use caution and common sense when operating jack.** Do not use a jack when tired, incoherent, dizzy, under the use of drugs or alcohol.

### **Training**

- Read this manual before use. Do not allow anyone who has not read this manual, and/or does not understand the requirements, use the jack.

### **Spectators**

- Do not allow bystanders around the jack or under the load supported only by the jack.
- Do not allow anyone in the vehicle while the jack is in use. Keep all spectators away from vehicle when in use.

### **Inspection**

- Inspect the jack carefully before each use. Ensure the jack is not damaged, excessively worn, or missing parts.
- Do not use the jack unless it is properly lubricated.
- Using a jack that is not in good clean working condition or properly lubricated may cause serious injury.

### **Chock and Block (Stabilize)**

- Apply parking brake in vehicle before operating jack.
- A chock is a wedge for steadying an object and holding it motionless, or for preventing the movement of a wheel. Chock the wheel opposite the end being lifted.
- When you block a load, you secure and support a load that is being lifted. The block(s) or stabilizer(s) should have a weight capacity that is greater than the weight of the load which is being lifted.

### **Additional Notes:**

Save the receipt, warranty and these instructions.

It is important that you read the entire manual to become familiar with this product before you begin using it.

- **Do not modify** the jack in any way. Unauthorized modification may impair the function and/or safety and could affect the life of the equipment. There are specific applications for which the jack was designed.
- **Always check for damaged or worn** out parts before using the jack. Broken parts will affect the equipment operation. Replace or repair damaged or worn parts immediately.
- When jack is not in use, store it in a secure place out of the reach of children. Inspect it for good working condition prior to storage and before re-use.

## MAINTENANCE INSTRUCTIONS

If you use and maintain your equipment properly, it will give you many years of service. Follow the maintenance instructions carefully to keep your equipment in good working condition. Never perform any maintenance on the equipment while it is under a load.

### Inspection

You should inspect the product for damage, wear, broken or missing parts (e.g.: pins) and all components function before each use. Follow lubrication and storage instructions for optimum product performance.

### Binding

If the product binds while under a load, use equipment with equal or a larger load capacity to lower the load safely to the ground. After un-binding; clean, lubricate and test that equipment is working properly. Rusty components, dirt, or worn parts can be causes of binding. Clean and lubricate the equipment as indicated in the lubrication section. Test the equipment by lifting without a load. If the binding continues contact Customer Service.

### Cleaning

If the moving parts of the equipment are obstructed, use air pressure or a stiff brush to clean. Use a non-flammable cleaning solvent or another good de-greaser to clean the equipment. Remove any existing rust, with a penetrating lubricant.

### Lubrication

This equipment will not operate safely without proper lubrication. Using the equipment without proper lubrication will result in poor performance and damage to the equipment. Some parts in this equipment are not self-lubricating, inspect the equipment before use and lubricate when necessary. After cleaning, lubricate the equipment using a light penetrating oil, silicon or teflon spray.

- Use a good Lubricant on all moving parts.
- For light duty use lubricate every once a month.
- For heavy and constant use lubrication recommended every week.

### Rust Prevention:

- Check ram's and pump plunger's on the power unit assemblies daily for any signs of rust or corrosion. Without a load lift the equipment as high as it goes and look under and behind the lifting points. If signs of rust are visible clean as needed.

### Grease Fittings

- Some Models contain grease fittings the will regularly need to be greases and lubricated.

### How the Jack Operates

With release valve closed, an upward stroke of the jack handle draws oil from the reservoir tank into the plunger cavity. Hydraulic pressure holds the valve closed, which keeps the oil in the plunger cavity. A downward stroke of the jack handle releases oil into the cylinder, which forces the ram out. This raises the saddle. When the ram reaches maximum extension, oil is bypassed back into the reservoir to prevent an over extended ram stroke and possible damage to the jack. Opening the release valve allows oil to flow back into the reservoir. This releases hydraulic pressure on the ram, which results in lowering the saddle.

### Storing the Jack

1. Lower the Lifting Arm.
2. Place the handle in the upright position.
3. Store in a dry location, recommended indoors.

*Note: If the jack is stored outdoors, be sure to lubricate all parts before and after use to ensure the jack stays in good working condition.*

### To Add Jack Oil:

1. Position the jack on level ground and lower the saddle.
2. Use a Phillips head screwdriver to remove the cover plate.
3. Remove the oil plug.
4. Fill the oil case until oil level is just beneath the lower rim of oil fill hole.
5. Replace oil plug.
6. Perform the Air Purge Procedure.

### To Replace Jack Oil:

1. Fully open release valve by turning handle counter-clockwise.
2. Turn the jack over so that old oil will drain from the oil fill hole.
3. Refill through oil fill hole. Keep dirt and other material clear when pouring.
4. Fill just beneath lower rim of hole. Replace oil plug.
5. Perform Air Purge Procedure described below.

### WARNING:

**Do not use motor oil in the jack.**

**Only use Anti-Foaming Jack Oil.**


**We recommend "Black Jack", Jack Oil.**

**ALWAYS USE A GOOD GRADE HYDRAULIC JACK OIL. DO NOT USE HYDRAULIC BRAKE FLUID, ALCOHOL, GLYCERINE, DETERGENT, MOTOR OIL OR DIRTY OIL. USE OF AN UN-RECOMMENDED FLUID CAN CAUSE DAMAGE TO A JACK.**





## ASSEMBLY INSTRUCTIONS




1. Prior to assembly carefully remove the retaining clip attached to the handle socket. **CAUTION:** The socket will tend to spring upward when the clip is removed. To prevent possible injury, place one hand on the top of socket to control the upward motion when removing the retaining clip, while simultaneously removing the retaining clip. (picture 1).

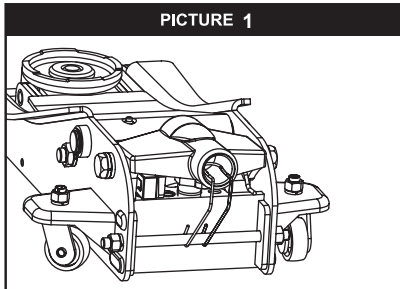

2. Refer to picture 2 when performing this step. Press Quick Disconnect on handle piece #2, this will allow handle pieces 1 and 2 to attach together. Align the hole and spring loaded button to allow the button to pop through the hole. When it is inserted correctly the button will pop through the hole automatically in the outer handle and a distinct clicking sound will be heard.

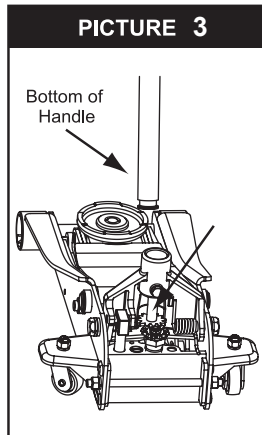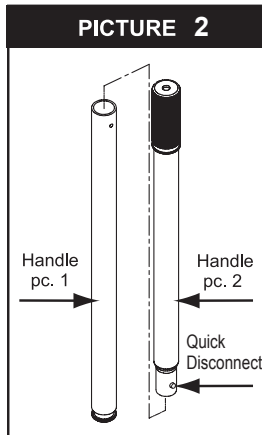

3. Fully unfasten the screw located in the Handle Socket to insert the assembled handle (picture 3).
4. Line up the square hole located at the bottom of the handle over the square bolt inside the Handle Socket.
5. Secure the handle in place by tightening the screw in the Handle Socket. Without any vehicle on the jack. Cycle the lift up and down several times to insure the hydraulic system is operating properly. (Refer to the Air Purge Procedure)

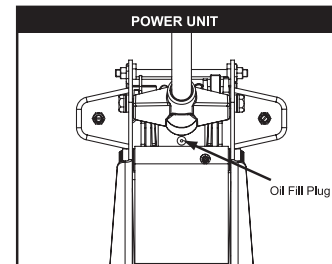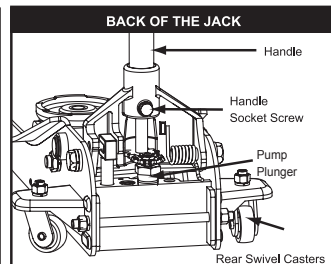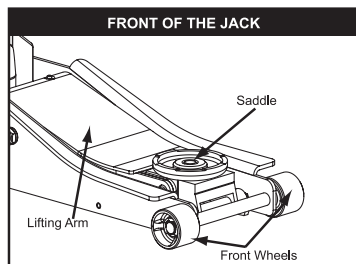

## PREPARATION

### Before Use

1. Verify that the product and application are compatible, if in doubt call Customer Service.
2. Before use, read the operator's manual completely and familiarize yourself thoroughly with the product, all components and recognize the potential hazards associated with its use.
3. Insert handle to handle fork. Tighten the bolt on handle fork to prevent accidental removal of handle while in use.



Do not lift or carry jack by handle. Handle could dislodge and jack may fall, resulting in possible injury or property damage


4. To familiarize yourself with the basic operation of the jack, locate and turn the release valve (handle):
  - a. Turn Clockwise until firm resistance is felt until no further turning. This is the 'CLOSED' release valve position used to raise the load.
  - b. Counter-clockwise, but no more than 1/2 full turn from the closed position. This is the 'OPEN' release valve position used to lower the load.
5. With saddle fully lowered, locate and remove air vent screw. Pump the operating handle through 6 to 8 full strokes. Check the oil level. Ensure the oil level is within ~3/16" from the inner cylinder as viewed from the air vent screw hole.
6. Reinstall the air vent screw.
7. Check to ensure that the jack rolls freely. Raise and lower the unloaded saddle throughout the lift range before putting into service to ensure the pump and release valve operate smoothly.
8. Replace worn or damaged parts and assemblies with manufacturer replacement parts only. Lubricate as instructed in lubrication section.

## SYSTEM AIR PURGE PROCEDURE

**IMPORTANT: BEFORE FIRST USE,** perform the following Air Purge Procedure to remove any air that may have been introduced into the hydraulic system as a result of product shipment and handling. This step is to be completed without and weight on the jack.

### STEP 1:


Turn release valve counterclockwise on full turn to the open position.

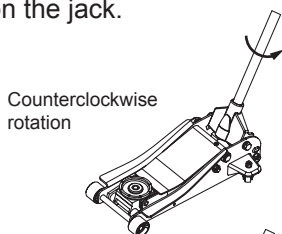

Counterclockwise rotation

### STEP 2:


Pump handle eight full strokes rapidly..

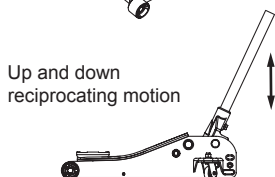

Up and down reciprocating motion

### STEP 3:


Carefully and slowly pinch oil fill plug to release trapped air.

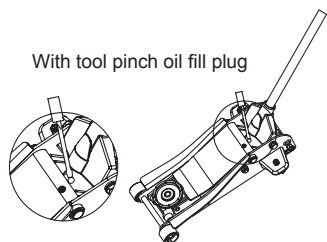

With tool pinch oil fill plug

### STEP 4:

Turn release valve clockwise to the closed position and check for proper pump action. It may be necessary to perform the above step more than once to assume air is evacuated totally.

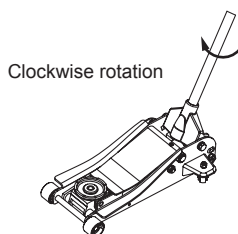

Clockwise rotation

## DESCRIPTION

Model **T830018+T43002T** features a **6,000-lb.** maximum capacity. The jack features an overload valve bypass system to prevent jack damage and user injury.

### Specifications:

Compact Design allows use in confined spaces

#### Service Jack

Maximum Load Capacity.....3 tons (6,000-lb.)

Minimum Lifting Height.....3½ inch

Maximum Lifting Height.....18 inch

#### Jack Stand

Maximum Load Capacity.....3 tons (6,000-lb.)

Minimum Lifting Height.....11¼ inch

Maximum Lifting Height.....16¾ inch

**WARNING:** This Product contains chemicals known to the state of California to cause cancer and birth defects or other reproductive harm.

## OPERATION

### Raising the Jack

1. Block the vehicle's wheels for lifting stability.
2. Set the Parking Brake in the vehicle.
3. Close the release valve by turning the handle clockwise as far as it will go.
4. Refer to the vehicle manufacturer owner's manual to locate approved lifting points on the vehicle. Position the jack so that the saddle is centered and will contact the load lifting point firmly.
5. Before raising the vehicle double check and verify the saddle is centered and also has full contact with the lifting point.
6. Continue to pump the jack handle to lift the vehicle to the desired height. After lifting, support the load with appropriately rated vehicle support stands before working on the vehicle.

### Lowering the Jack

1. Raise the load.
2. Remove support stands.
3. Grasp the handle firmly with both hands. Securely hold on to the jack handle so your hands do not slip and ensure the release valve does not rapidly lower.
4. Carefully open the Release Valve by slowly turning the handle counterclockwise. (Do not allow bystanders around the jack or under the load when lowering the jack.)

**WARNING** The jack handle may turn rapidly. Use extreme caution when lowering the jack; this can cause the release valve to lower rapidly. Failure to heed these warnings could cause serious injury or death.

# TROUBLESHOOTING


JACK WILL NOT LIFT LOAD	JACK WILL NOT HOLD LOAD	JACK WILL NOT LOWER	POOR JACK LIFTING	CAUSES AND SOLUTIONS
✗				Release valve is not completely closed. Turn handle clockwise.
✗			✗	Air is in the hydraulics. Purge air from system. Complete the airr purge procedure.
✗	✗		✗	Low oil level. Add oil as required.
		✗		Oil reservior is overfilled: Drain excessive oil. Lubricate moving parts.
✗	✗		✗	Power unit malfunctioning. Replace the power unit.

# PARTS LIST

Item Index No.	Description	Quantity
1	Front wheel assembly	2
2	Saddle	1
3	Socket Handle screw	1
4	Power unit assembly	1
5	Rear Wheel	2
6	Pump Handle	1

Safe Operating Temperature is between  
40°F – 105°F (4°C - 41°C)

*The manufacturer reserves the rights to make design changes and or improvements to product lines and manuals without notice.*

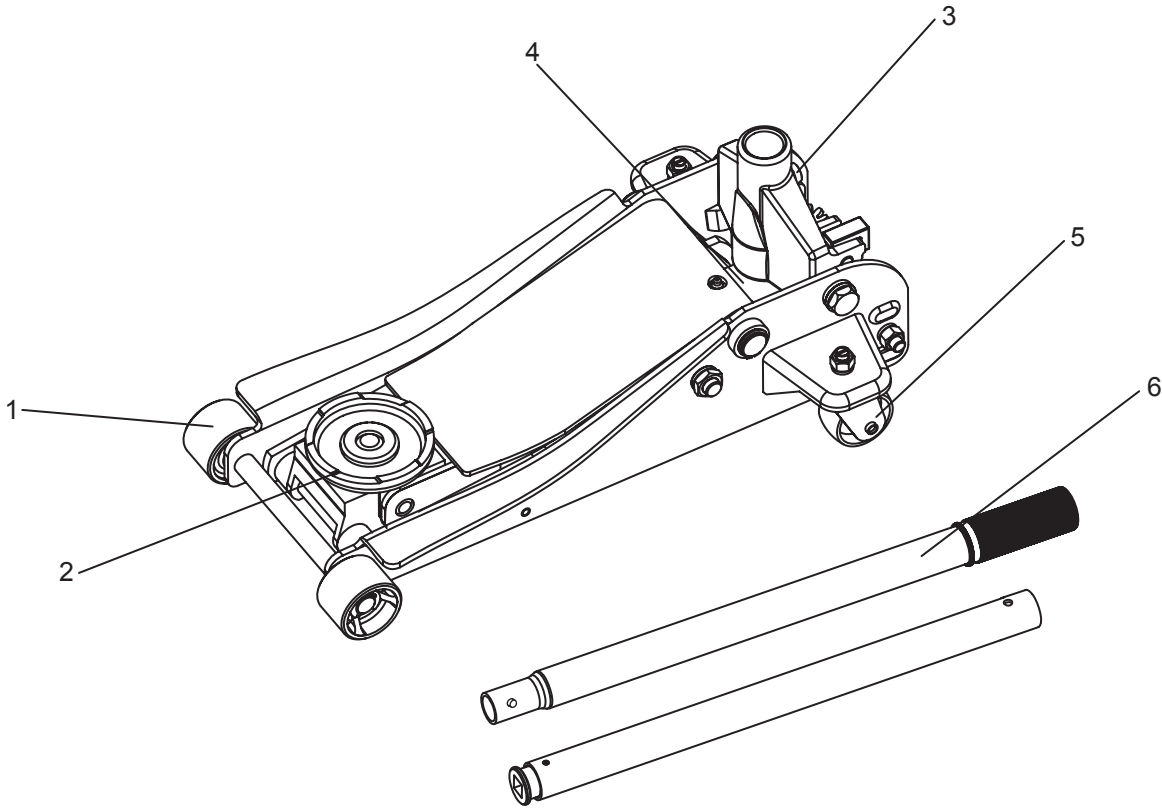



## SAFETY INFORMATION

Save these instructions. For your safety, read, understand, and follow the information provided with and on this pair of jack stands before using. The owner and/or operator of this equipment should have an understanding of jack stands and safe operating procedures before attempting to use. The owner and/or operator should be aware that use of this product may require special skills and knowledge. Instructions and safety information should be conveyed in the operator's native language before use of these jack stands is authorized. If any doubt exists as to the safe and proper use of these jack stands as outlined in this factory authorized manual, remove from service immediately.

Inspect before each use. Do not use if parts are broken, bent, cracked, or damaged (including labels). Any jack stand that appears damaged in any way, operates abnormally or is missing parts, should be removed from service immediately and the manufacturer notified. If you suspect that the jack stand was subjected to a shock load (a load suddenly dropped unexpectedly upon it), immediately discontinue use until stands have been checked by a factory authorized service center (contact distributor or manufacturer for list of Authorized Service Centers). Have a qualified professional perform an annual inspection. Labels and owner's manuals are available from manufacturer. No replacement parts are available for these devices. Replace as a matched set only.

### \* Product Description

Jack Stands are designed to support rated capacity, partial vehicle loads consisting of one end of a vehicle. Use as a matched pair to support one end of a vehicle only.



**NEVER** use automotive jack stands to support both ends or one side of a vehicle!  
Use only 1 pair per vehicle. Rated capacity is per pair only!



## WARNING!

1. Read-Study and understand all warning and operating instructions prior to use.
2. DO NOT OVERLOAD these jack stands beyond their rated capacity.
3. These jack stands are designed for use on hard level surfaces only.
4. Center load on saddle prior to lifting. Use as a matched pair to support one end of a vehicle only.
5. Stands are not to be used to simultaneously support both ends or one side of a vehicle.
6. No alterations shall be made to this product.
7. Failure to heed these warnings may result in damage to jack stands and/or failure resulting in personal injury or property damage.
8. Inspect before each use.



Be sure all tools and personnel are clear before lowering load. Use only attachments and/or adapters supplied by the manufacturer. Lift only on areas of the vehicle as specified by the vehicle manufacturer.

### \* Inspection

Inspect the Jack Stands before each use. Do not use if components are bent, broken or cracked.

## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and diagram below. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service.

Estimated Assembly Time: 15 minutes

Tools Required for Assembly: Hammer and punch (Not included).





### \* Before Use

1. Inspect stands before each use. Do not use if components are bent, broken or cracked. Ensure that all parts move freely.
2. Verify that the product and the application are compatible. If in doubt, contact Customer Support
3. Before using this product, read the owner's manual and familiarize yourself thoroughly with the product and the hazards associated with its improper use.
4. Always check the vehicle owners or service manual for location of proper lift and support points.



## ASSEMBLY INSTRUCTIONS

1. Install ratchet bar into frame (fig.1) with ratchet portion of bar aligned with locking pawl (stopper).
2. Move the ratchet bar to its lowest position by raising the locking handle, thereby releasing the stopper, and guiding the bar downward (fig. 2).
3. Bend metal tab in (Fig. 3) using a hammer and punch.  
This will help prevent inadvertent separation of the ratchet bar from base frame.

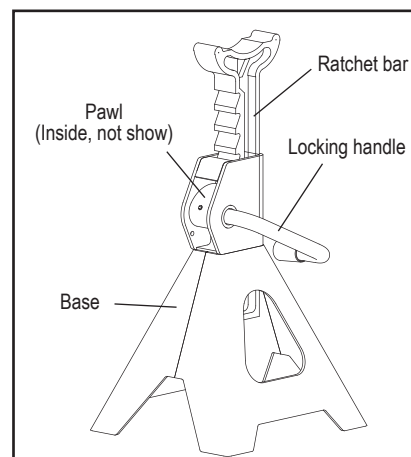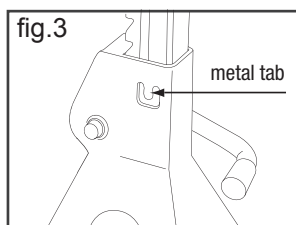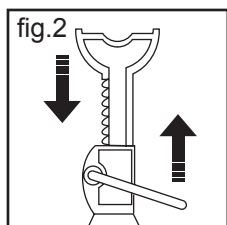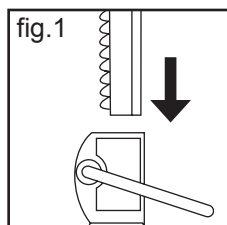

## OPERATING INSTRUCTIONS

1. Adjust height by pulling up on ratchet bar.
2. The weight of the locking handle should secure the ratchet bar in desired position. To confirm this, simply push down on the locking handle. Check to ensure ratchet is secure before loading.
3. Carefully position jack stands so that load is centered on stand's saddle.
4. Slowly lower the vehicle onto the stands.
5. Check to ensure vehicle is secure before working on, around or under. When used to support vehicle, use wheel chocks on all unlifted wheels in both directions to prevent inadvertent movement.

### \* To lower load

1. Ensure that all tools, equipment and personnel are clear before lowering load.
2. With suitable jack, raise vehicle clear of stands.
3. Carefully release stopper and allow ratchet to glide down to lowest position.
4. Carefully remove stands, then carefully lower vehicle with lift device.

## CARE AND MAINTENANCE

Periodically inspect each stand. Ensure all parts move freely. Do not apply oil or grease to any portion of this product. If rust appears, sand affected area and cover with suitable utility paint. Please note that there is no replacement part applicable to this device.

### \* Storage

Store stands in upright position and in a clean, dry area.

## REPLACEMENT PARTS

For replacement parts Customer Service at 1-888-448-6746, 8 a.m. - 5 p.m., PST, Monday - Friday. Not all equipment components are available for replacement, illustrations provided are a convenient reference of location and position in the assembly sequence. When ordering parts the following will be required: Model Number, Serial Number and Description.



## WARRANTY

### ONE YEAR LIMITED WARRANTY

Torin® has been producing quality automotive repair and maintenance products since 1968. All products are sold are felt to be of the highest quality and are covered by the following warranty:

With proof of purchase for a period of one year from the date of that purchase, the manufacturer will repair or replace, at its discretion, without charge, any of its products or parts thereof which fail due to a defect in material or workmanship.

This warranty does not cover damage or defects caused by improper use, careless use or abuse of the equipment. This warranty does not cover parts normally considered to wear out or be consumed in the normal operation of the equipment.

Except where such limitations and exclusions are specifically prohibited by applicable law, (1) the CONSUMER'S SOLE AND EXCLUSIVE REMEDY SHALL BE THE REPAIR OR REPLACEMENT OF DEFECTIVE PRODUCTS AS DESCRIBED ABOVE, and (2) THE MANUFACTURER SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGE OR LOSS WHATSOEVER, and (3) THE DURATION OF ANY AND ALL EXPRESSED AND IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, ANY WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IS LIMITED TO A PERIOD OF ONE YEAR FROM DATE OF PURCHASE.

For any technical questions or warranty support please contact:

Torin® Customer Service directly by telephone at 1-888-44-TORIN (1-888-448-6746)

8:00am - 4:30 pm Pacific Time, Monday - Friday.

Alternately Customer Service can be reached through [www.torinjacks.com](http://www.torinjacks.com) or via email at [info@torinjacks.com](mailto:info@torinjacks.com).

